



**1**

With the screen frame removed from the case, insert the iPad into the case.

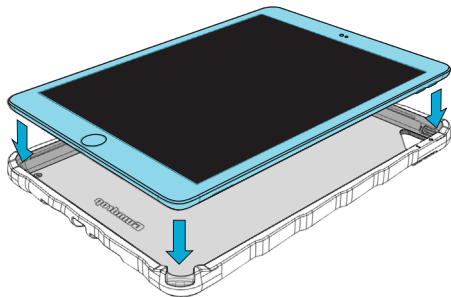


**4**

Massage the rigid frame into the case along the top edge.

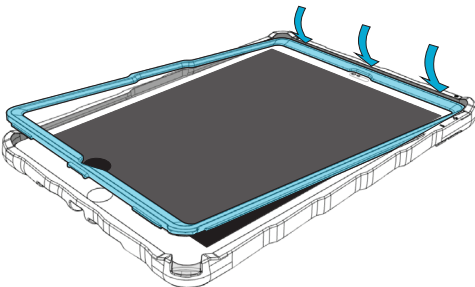


**2**

Remove the protective film from the plastic screen overlay.

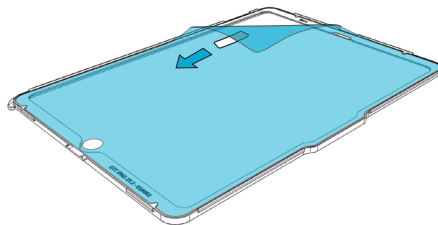


**5**

Repeat steps 3B-4 for the remaining sides of the case until the frame is securely attached to the case.

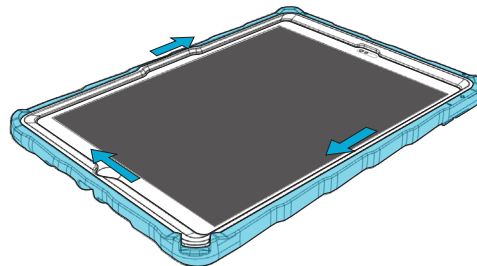

**3**

- (A) Flip the rigid frame over, line it up with the iPad home button and front camera.
- (B) Insert the frame into a corner of the case.

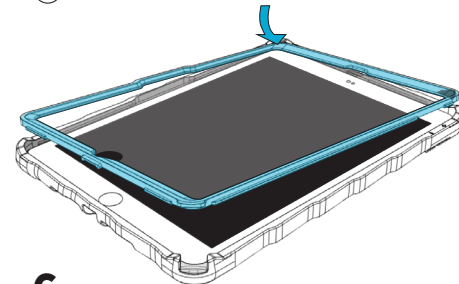

**6**

Remove the protective film from the case's back PC window.

