
Gumdrop

1

Slide the device keyboard under the bottom case's left side clip.

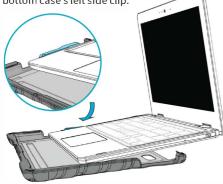

4

Carefully press the rear corner clips to snap onto the keyboard.




Close the case and press on the clips located on the bottom of the top case. Make sure the clips are securely attached




2

Press the other side of the keyboard down to snap into the right side clip securely.

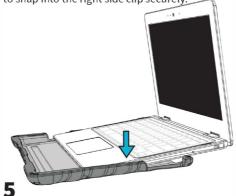


Slide the top case down, to secure the screen behind the side clips, until the device reaches the case's top edge.

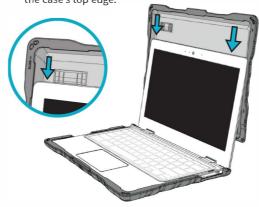

INSTALLATION

3

Push the keyboard forward until it is flush with the front edge of the bottom case.

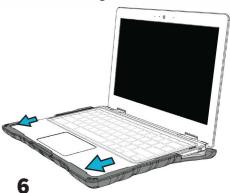

Press the lower side clips over the device, with pressure from both sides, to snap into place securely.




CRITICAL! FOLLOW STEPS 1 - 3 IN ORDER

Failure to do so may result in damage to the device.




1


Unhook the 3 clips located on the top case's bottom, near the spine.



Start sliding the top case off by pushing up with your fingers on the bottom corners.

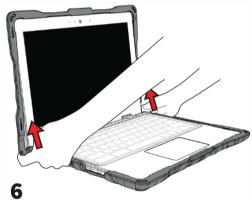

Push the left and right side clips down past the device, one side at a time, to release it from the bottom case.

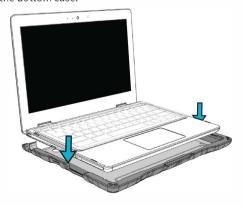

4

Gently slide the top case up and off the device to release it from the upper side clips.



5

Push the lower left and right side clips outward to release the bottom of the top case from the device.



Gently push the rear clips down to unhook from the device.

