Gumdrop

INSTALLATION

Slide the keyboard forward until it is flush

3

1

Slide the device keyboard under the bottom case's left side clip.



Close the device screen and carefully press the rear corner clips to snap onto the keyboard.



7

Close the case and press on the rear clips along the back edge of the top case. Make sure all clips are securely attached. ***Case may have a 3rd clip at the center**




2

Press the other side of the keyboard down to snap into the right side clip securely.



Align the top edge of the device with the case's upper side clips. Slide the top case down until the device is flush with the top edge.



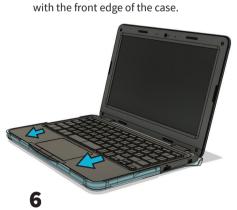

Press the lower side clips over the device, with pressure from both sides, to snap into place securely.



REMOVAL

Gumdrop

CRITICAL! FOLLOW STEPS 1 - 3 IN ORDER

Failure to do so may result in damage to the device.

1

Unhook the rear clips along the back edge of the top case. **Case may have 3rd clip at the center*




3

Gently slide the top case up and off the device to release it from the upper side clips.



The PC case is recyclable if the feet and EDP (Energy Displacement Protection) are removed!

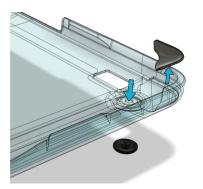

4

Gently push the rear clips down to unhook from the device. *Closing device partially may help with this step



2

Push the lower left and right side clips outward to release the bottom of the top case from the device.



5

Push the left and right side clips down past the device, one side at a time, to release the bottom case.

