



1

To install case to the iPad, begin by peeling the rubber case down and away from the corner of the rigid frame.

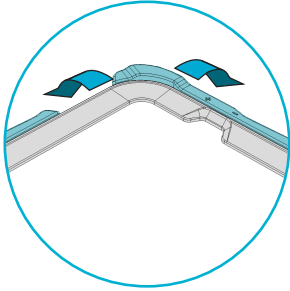


2

With the rigid frame removed from the case, remove protective film from screen overlay.

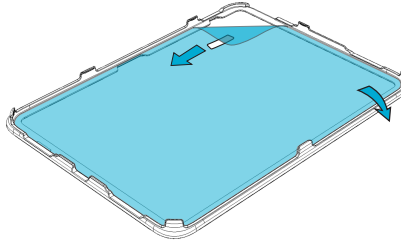


3

Align the rigid frame notches to the camera side of the iPad and clip the plastic frame to the screen side of the iPad.

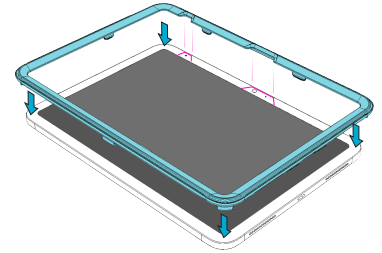


4

Place the rigid frame and iPad into the case body, starting at the bottom.

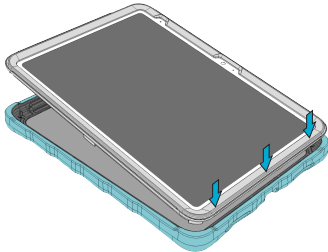

5

Clip the rigid frame into the case by working the rubber around the edge of the case.

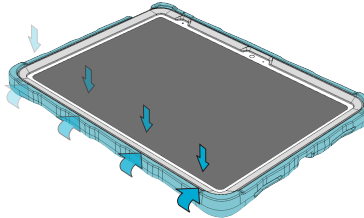

6

With the case securely attached, flip over to remove protective film from the back side of the case.

