

Installation




- 1 Remove Back Panel**
Press firmly at the camera corners (marked with two dots) to pull off the back panel.

Install Screen Overlay

Peel off both protective films. Line up the overlay notch with alignment mark in the bezel.




- 2 Insert iPad**
Locate the power button on your device, and place iPad face down into the frame. Make sure button match the cutouts.

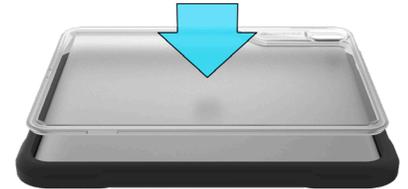

- 3 Snap On Back Panel**
Align the camera hole. Press firmly around all edges until fully snapped in.


Removal

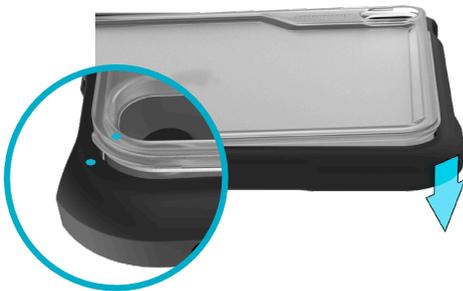

- 1 Start at Camera Corner**
Gently flex the rubber at the camera corner and peel back.



- 2 Remove Back Panel**
Lift panel off on a flat surface while keeping iPad in frame.

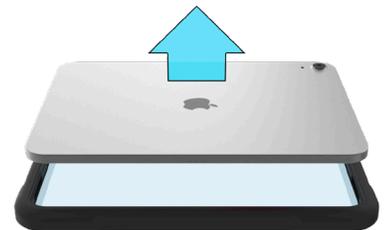

- 3 Remove iPad**
Lift iPad and overlay out of case.